 





## How to use the remote control?

### Remote Control configuration

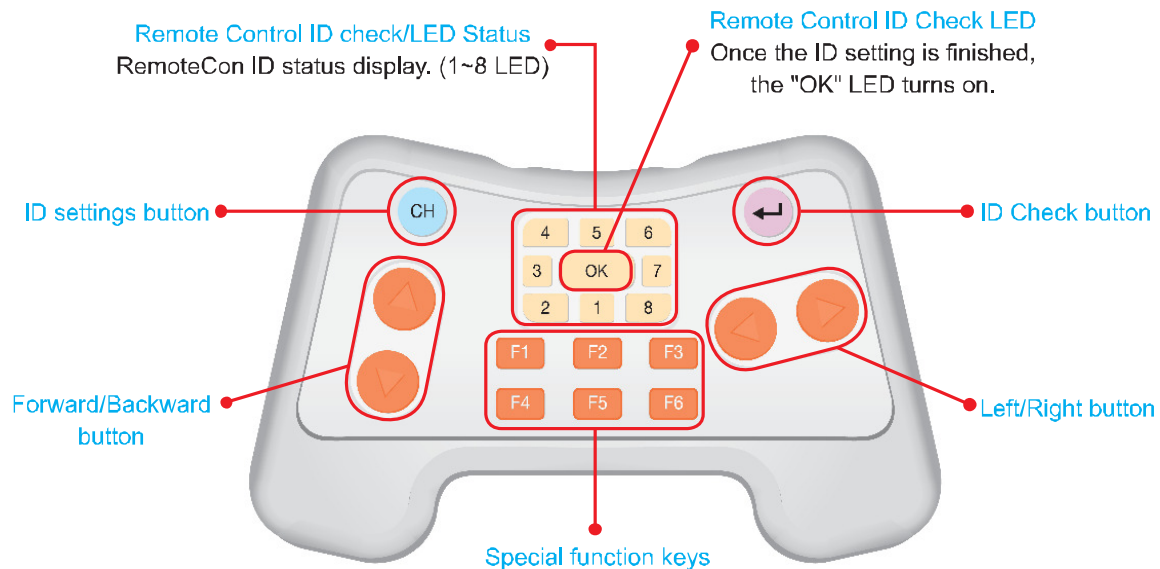


### Setting remote control ID

 - ① Turn on the robot.
  - ② Select # 2 mode of robot.
  - ③ Press **CH** button while holding **←** button. The **A** panel ID LED turns on and shows you what mode you chose.
  - ④ Press **CH** button while holding **←** button and choose your ID. (Number 1~8)
  - ⑤ After selecting ID, if you release **←** Button and press **CH** button, ID will be selected.
  - ⑥ The LED on the mainboard will blink 3 times and it will turn off automatically.  
That means the ID Selection is finished.
  - ⑦ If you press **←** button, you can see your selected ID.
- ※ If there is a problem, repeat steps 1-7 carefully.

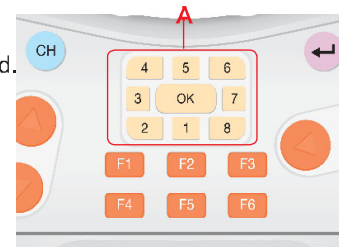


### How to set up communication ID

 - ※ The maximum number of channels can be set as shown below without interference.  
Use the picture to assign the channels to the communication ID.

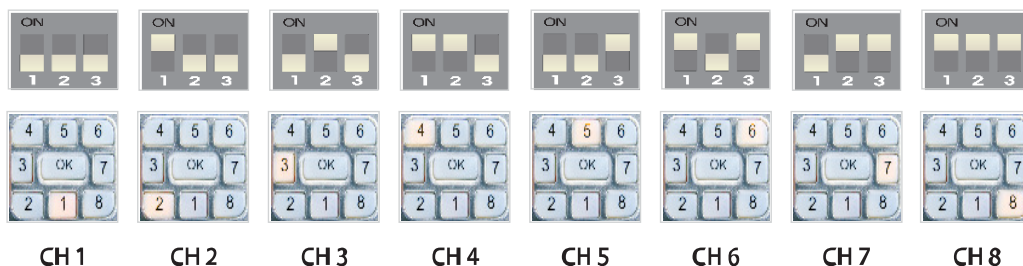





## Robot Making7-Mini Racing Car

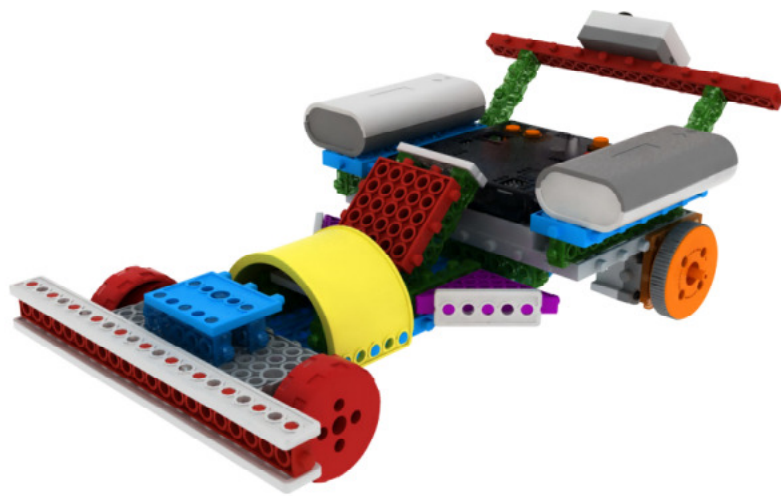 


1

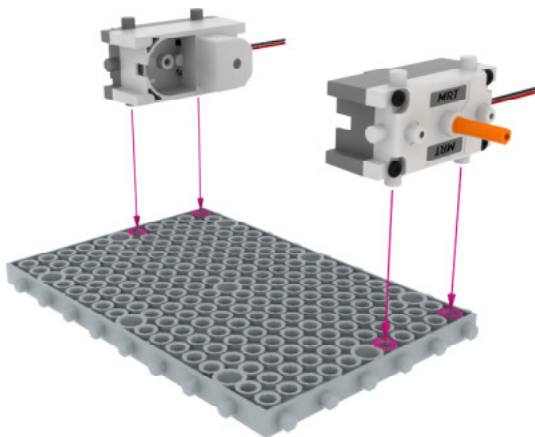 


2

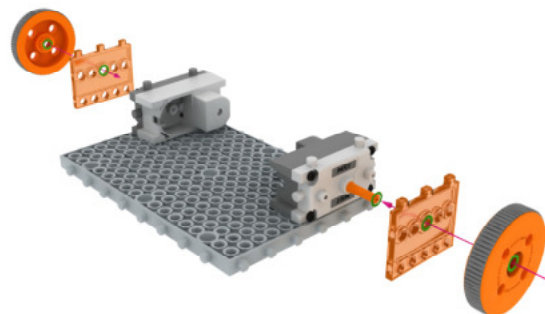 


3

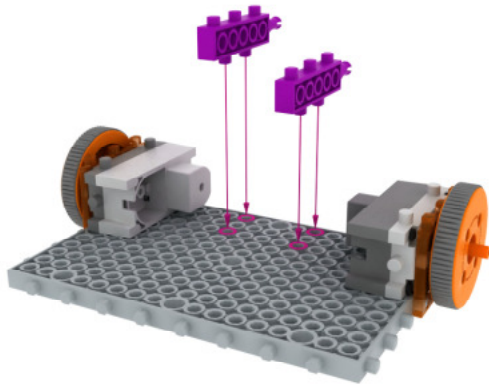 


4

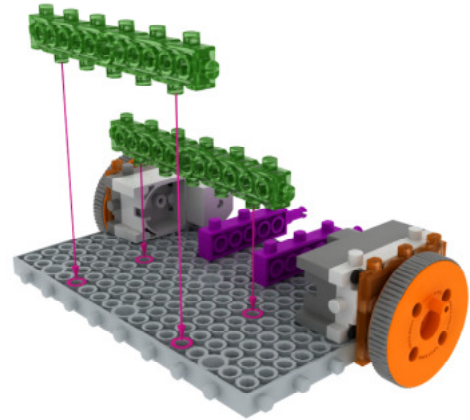 


5

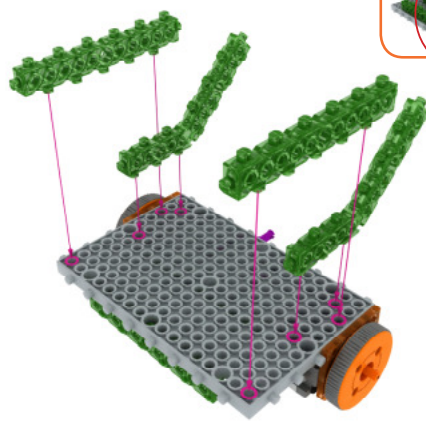 


6

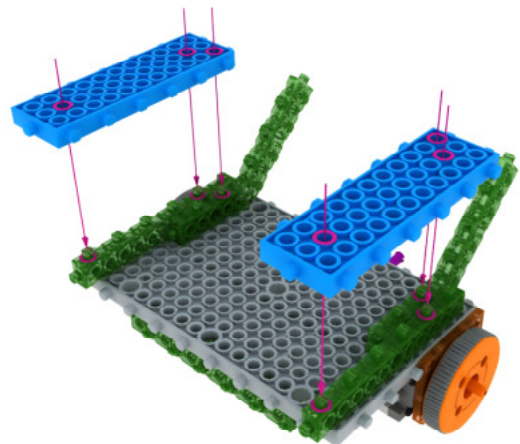 


7

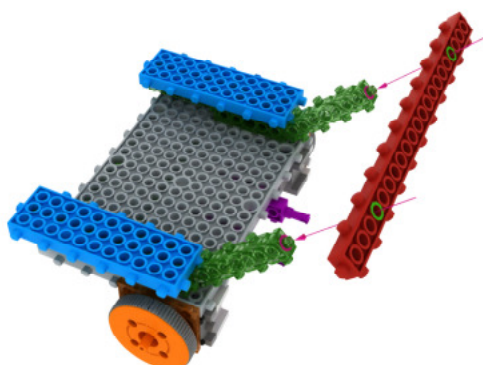 


8

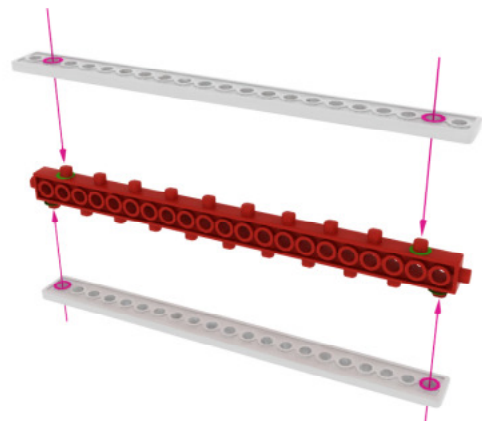 



9

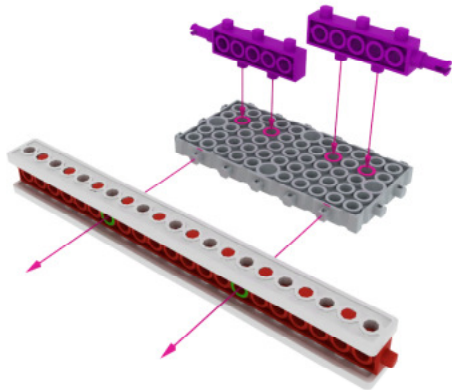 



10

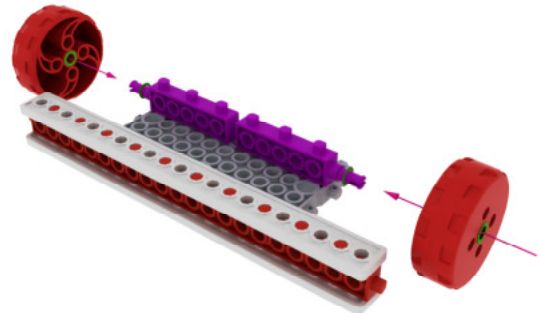 


11

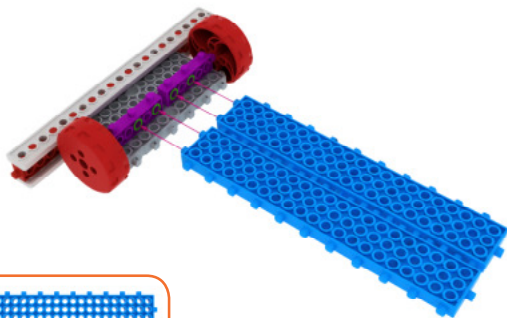  


12

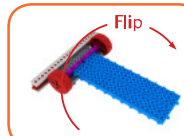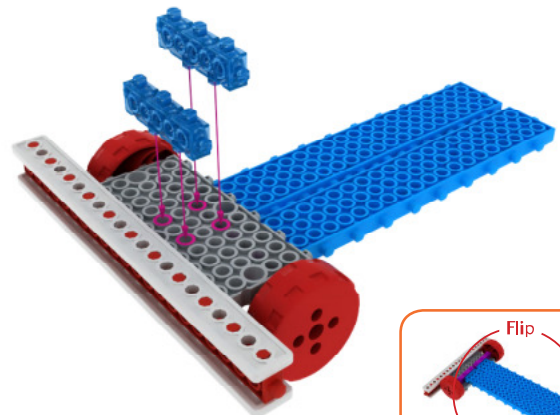  

13

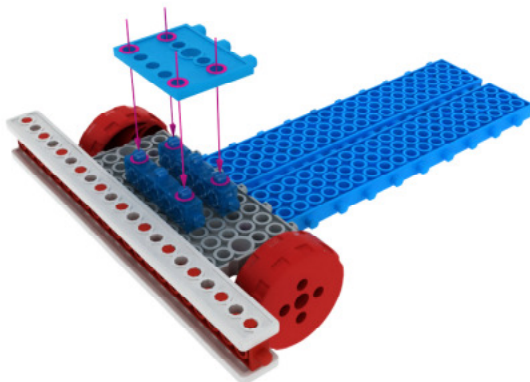 


14

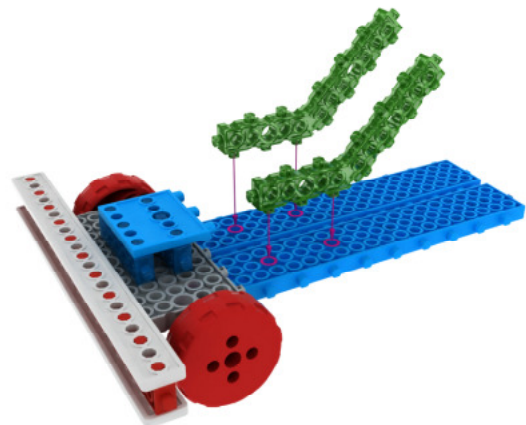 





15

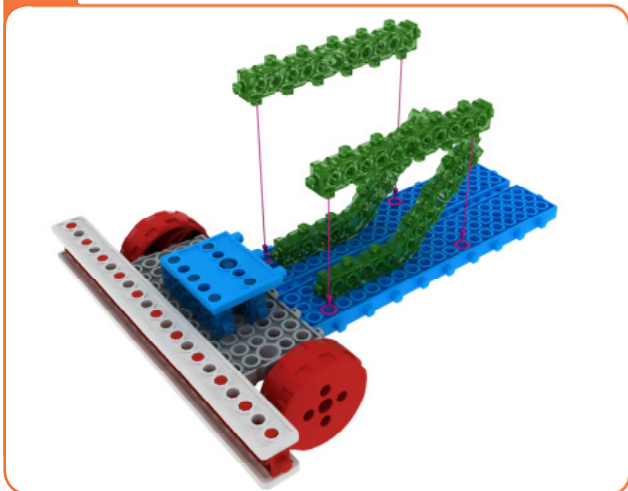 


16

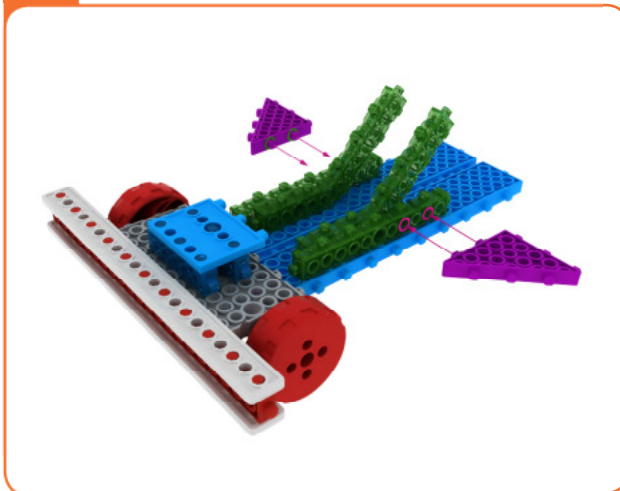 


17

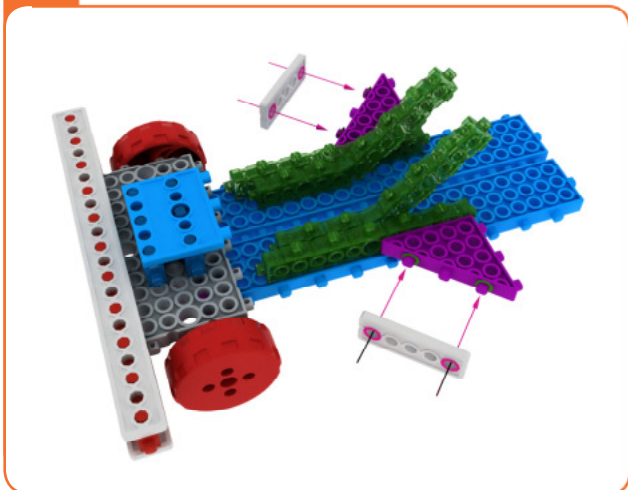 


18

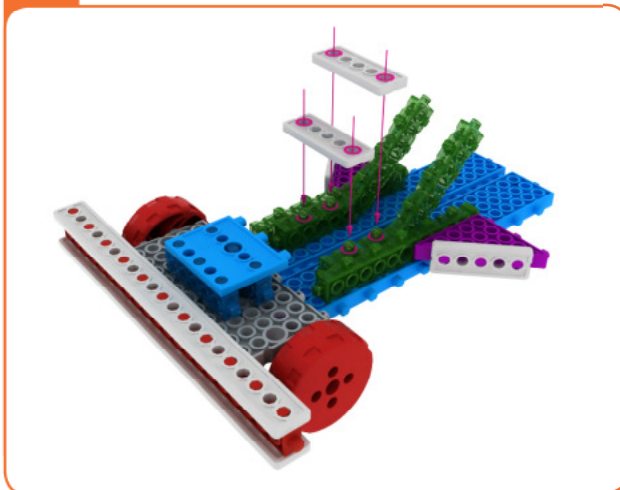 


19

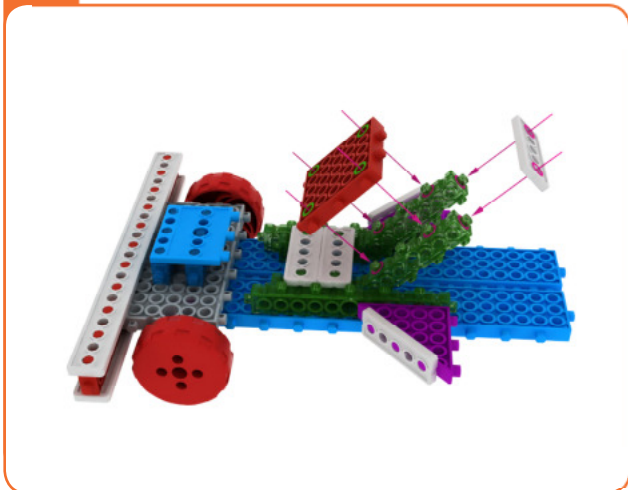 


20

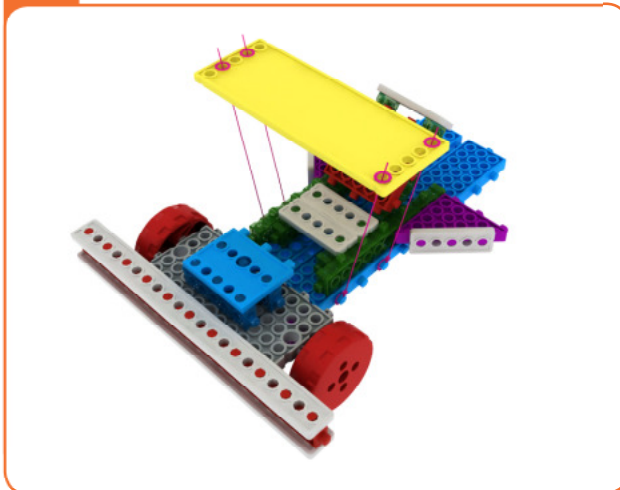 


21

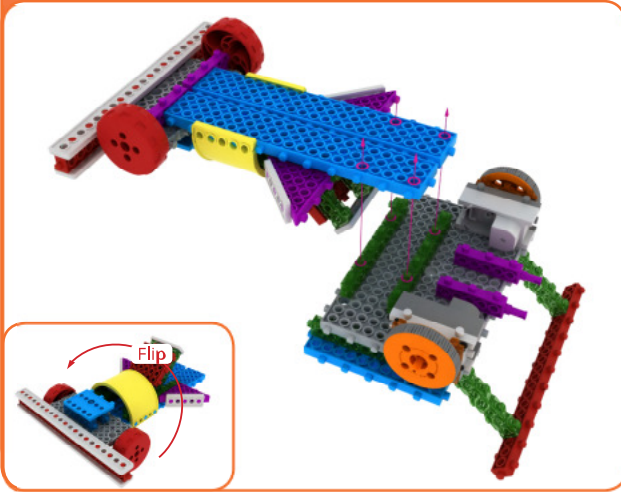 


22

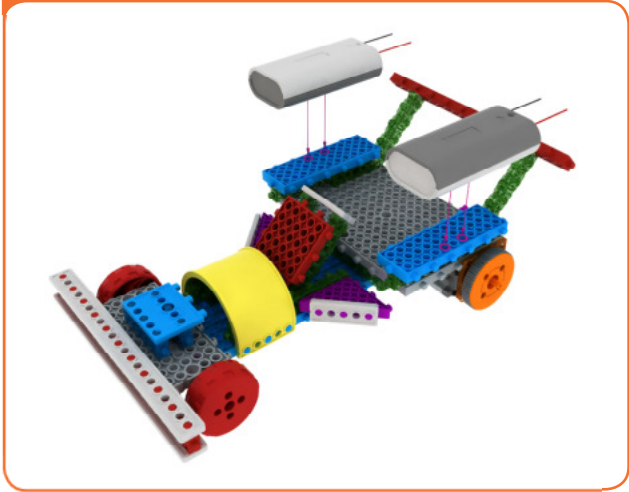 

23

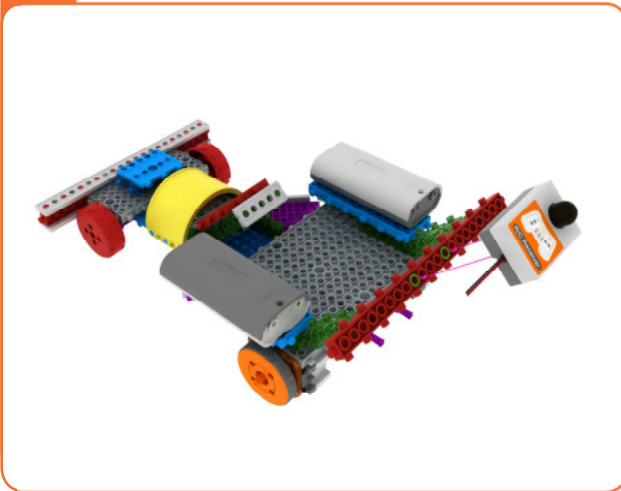 

24

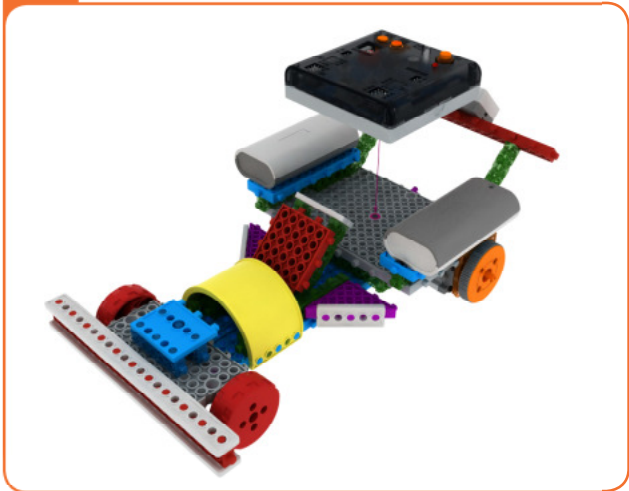 

End

